


## EXPRESS PASS

# INSTALLATION GUIDE



Express Pass

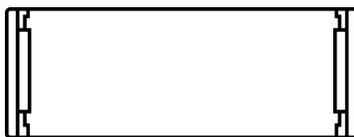

Plastic Holder




Fastener Strips

1




Remove the backing from one side of the fastener strips and apply them to the back of the plastic holder. The fastener strip may partially overlap the switch window.

2

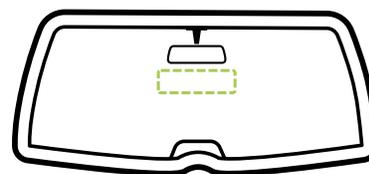

Install the holder on the inside of the front windshield no more than 6" below the top of the windshield and at least 2" below the rearview mirror and any tinted areas.

3

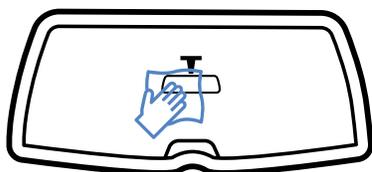

Clean and dry the installation area on your windshield.

4



Remove backing from the back side of the fastener strips, and attach the holder to the inside of the windshield. Fastener strips cannot be repositioned once installed.

## IMPORTANT NOTE

Many vehicles (especially electric or plug-in electric hybrids) have electromagnetic shielding which necessitates a specific installation spot on your windshield.

Please consult your owner's manual for information on where to install transponders.

## USE YOUR EXPRESS PASS IN ANOTHER VEHICLE

Express Passes are transferable between vehicles. An additional plastic mounting bracket and fastener strips are required to use the Express Pass in another vehicle.

Please contact Express Lanes Customer Service at [www.expresspass.utah.gov](http://www.expresspass.utah.gov) or call 855-813-9127 or scan QR code to purchase additional parts



Express Lanes  
Customer Service

# Your Express Pass Account & How to Use Your Express Pass

## Switching Between TOLL and HOV Modes

To swap between transponder modes, slide the tab on the left side of the device.

**TOLL:** Slide the tab to the left until it clicks into place - the word "TOLL" will be visible.

**HOV:** Slide the tab to the right until it clicks into place - the word "HOV" on a red background will be visible.

## Using the I-15 Express Lanes

The Express Lanes are split into 16 payment zones- 8 on the northbound and 8 on the southbound I-15. Entering and exiting the Express Lanes is restricted in areas with solid double-white lines; dashed double-white lines found at most interchanges indicate access points to the Express Lanes.

Each zone has overhead signs that indicate the price to travel to the zone, and the location at which the zone ends.

You will be charged for each zone you enter on your trip - even if you only travel through part of the zone.

You will only pay the price you see when you enter the zone.

## Managing your Express Pass Account

To manage your Express Pass account, including customer service, updating payment methods, and history of tolls accrued, visit [www.expresspass.utah.gov](http://www.expresspass.utah.gov) or call 855-813-9127

### Important note about your account:

Express Pass account holders are charged an account maintenance fee each month if the account does not accrue at least \$2.50 in tolls

This account maintenance fee is reduced by tolls charged during a month up to a total removal of the fee when \$2.50 in tolls is reached